


OPERATING INSTRUCTIONS


WEO PLUG-IN




CONNECTION

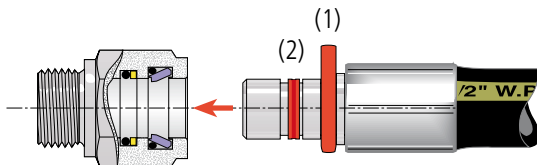

Mount the assembly stop (1) on the male part and make sure that the release ring (2) slides easily in the groove.

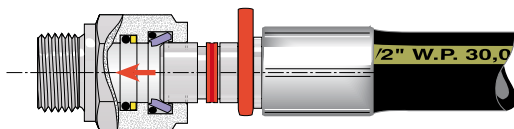


The male part is pushed into the female part until the assembly stop reaches the female part. Pull back to verify a proper connection has been made*.

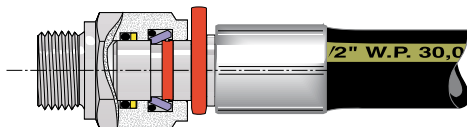


The coupling is now connected and locked.

** An improper connection may result in a sudden assembly failure with a potential for personal injury.*


DISCONNECTION

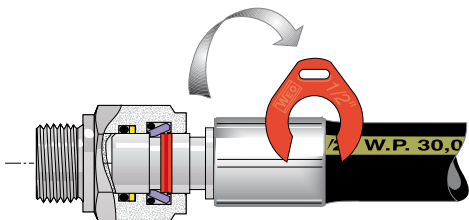

Remove the assembly stop (e.g. by using a screw driver etc.)

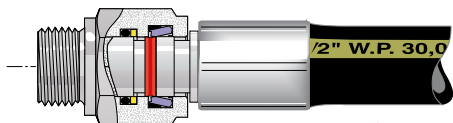

Push the male part completely into the female part.

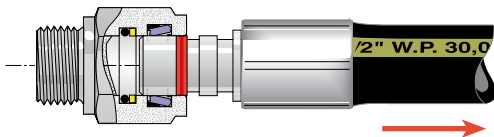

Pull the male part out of the female part. Mount the assembly stop on the male part again.

**Crimping Instructions is supplied by
your WEO Plug-In supplier or can be
downloaded from www.cejn.com**

Temperature range

-30° – +100° C

Working Pressure and safety factors

A maximum working pressure of 350 bar applies to sizes between 1/4"–3/4". Maximum working pressure for 1" couplings is 250 bar.

Note: Working pressure may vary between connections,
see information for respective product.

CEJN AB

Hasslumsvägen 33, Box 245, SE – 541 25 Skövde
Tel. +46 (0)500 47 75 00, Fax. +46 (0)500 48 07 16
www.cejn.com